

BlueParrott B250-XTS SE

What is the pass code or PIN for pairing my headset?

If prompted when pairing your headset, the pass code or PIN is "0000"
(four zeros)