


# BlueParrott C400-XT

## How do I change the wearing style on my BlueParrott C400-XT headset?


To change the wearing style on your BlueParrott C400-XT device, follow these steps.

1. Pull the ear cushion off the device.
2. Grasp the headband connector ring and twist it slightly while firmly pulling it off the device.
3. To attach the other wearing style, take the connector ring and press it down firmly over the device mount to snap it into place.
4. Align the ear cushion with the device mount and press to snap the ear cushion back on to place.

### Over-The-Head

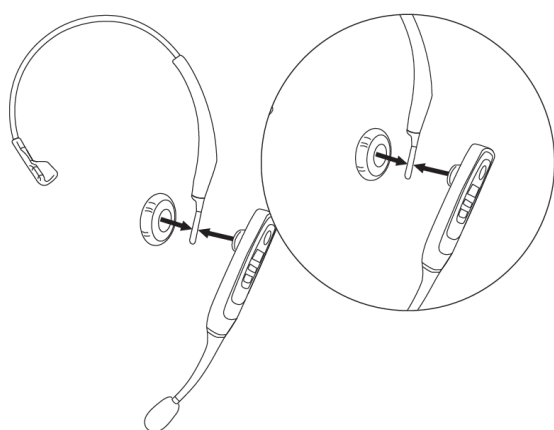

### Behind-The-Neck

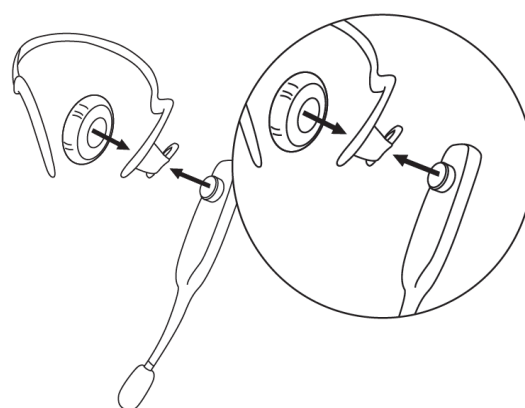

### Note

The Over-the-Head style is reversible for either left or right use.