


## BlueParrott M500-XT

### How do I change the wearing style of my BlueParrott M500-XT headset?

You can wear the BlueParrott M500-XT headset on your right or left ear.

To change the headset to wear it on the other ear, rotate the microphone horizontally to the other side. Then swivel the microphone up and over and point it towards your mouth.

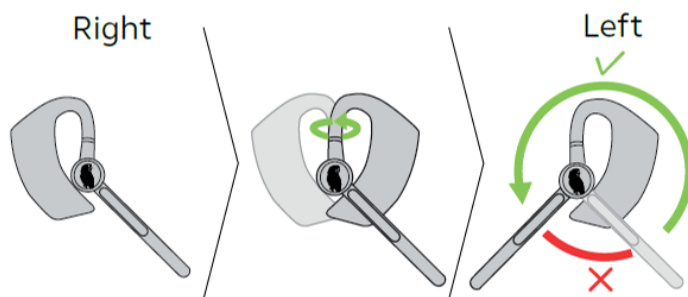

#### Note

A good fit is essential for obtaining the best sound experience. Make sure to try all the EarGel sizes until you find the fit that gives you the best combination of comfort and sound quality. You may benefit from using a different size EarGel in your other ear.